

By default, the base and charger cap print with a thin connector (shown in red) to help reduce warping. Cut these prior to assembly.




Press watch charger cap onto watch charger and lay cable in the groove.



Lay the phone charging cable in the groove of the other side.



Bring the two halves together, and remove the charger cap from the watch charger.

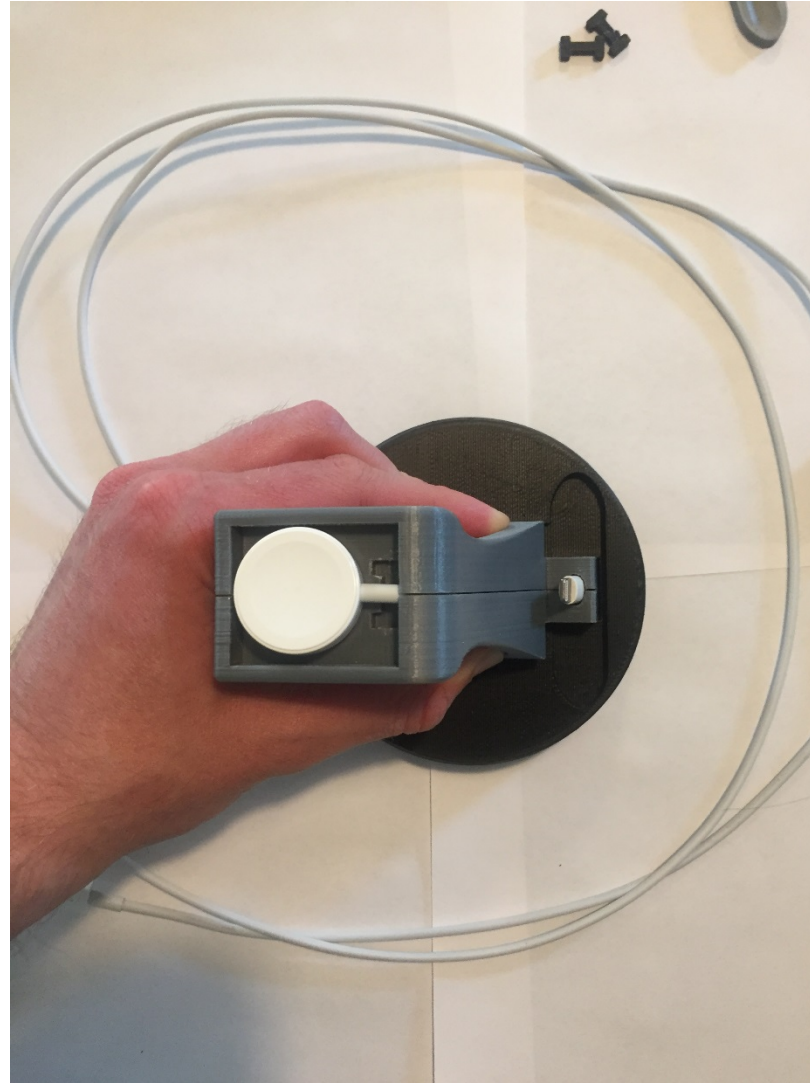

Press the two halves into the stand base. If it does not go in easily, sand the faces which are interfering.






Press the two clips into the pockets under the watch charger. It helps to use a flathead screwdriver.



Press on the adapter piece and the watch charger cap. You may need to lightly sand the sides of the watch charger cap.

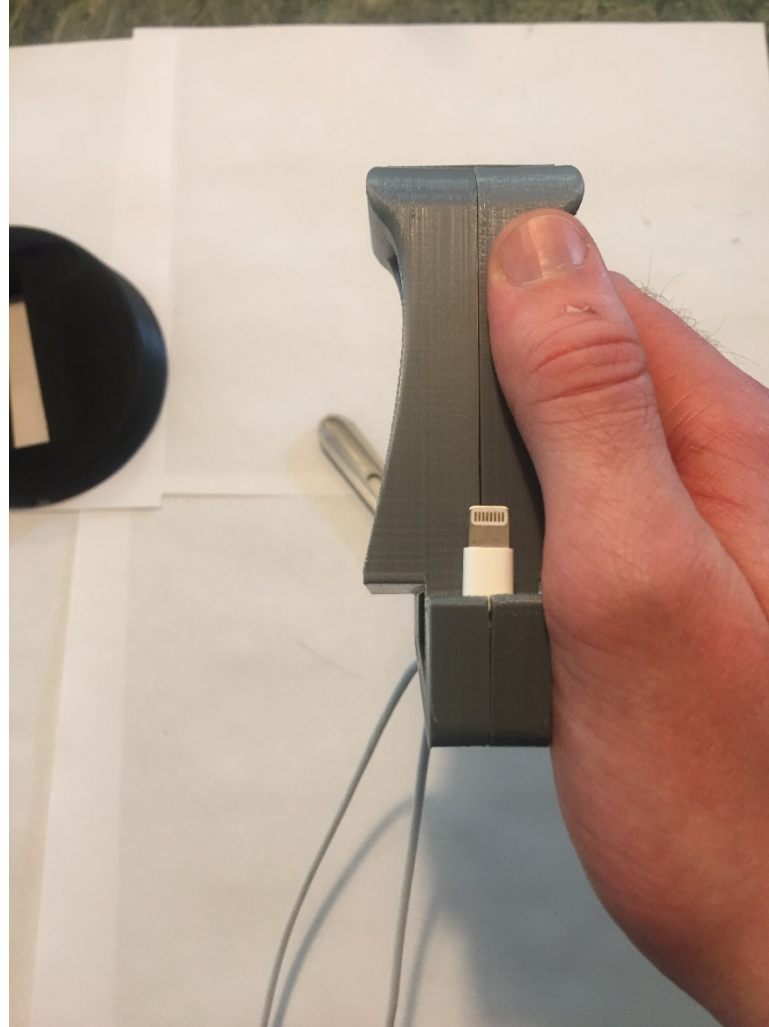

To disassemble: Remove the base, then grab one half and firmly pull down the other half while rocking it back and forth.